

## 552 v1.2 Front Panel Shortcuts

Function	Key Sequence	Action	Function	Key Sequence	Action
Setup Menu		Press and hold the Battery Check button then press the Headphone Controller Enters the Setup Menu.	Playback Folder Navigation		Hold the Battery Check button and push the Recorder Controller to the Rewind and Fast Forward positions. Loads the previous or next daily folder respectively for playback.
Card Space / Time / Date		Press and hold the Battery Check button Announces the remaining card space available (if inserted). Continue to hold the button to hear the current Time and Date.	Playback to Outputs		Hold the Battery Check button and push the Recorder Controller to the Play position Sends Playback program to the Left and Right Outputs.
Time Date Set		Hold PFL 5, press Battery Check button, and press the Headphone Controller Enters Time Date Set menu.	Mic / Line		Hold PFL and slide the Slate Mic/Tone Switch to the Slate position Toggles between Mic and Line level for the select input.
LED Brightness		Hold the Battery Check button and turn the Headphone Controller Adjusts the brightness level of all front panel LEDs.	Phantom Power		Hold PFL and slide the Slate Mic/Tone Switch to the Tone position Toggles phantom power on and off for the select input.
Meter Zoom		Press the Headphone Controller Toggles Meter Zoom on and off. When on, the resolution of the Output Meter is increased and ranges from 0 to 20 dB.	Polarity Reverse Channel 2 and 4		Hold PFL (Channels 2 and 4 only) and press the Battery Check button Reverses the polarity of channel 2 and 4.
3.5 mm HP Gain (Talk Back Mode)		Slide the Slate Mic/Tone Switch Slate position and turn the Headphone Controller Adjusts the 3.5 mm headphone level in Talk Back mode.	Input Mute		Press and hold the headphone controller then press the PFL- Toggles input muting for the select Input
All Call (Talk Back Mode)		Press and hold the Battery Check button and slide the Slate Mic/Tone Switch to the Tone position Temporarily returns the Slate Mic to normal operation when in Talk Back mode.	RTN Level		Slide the RTN Switch to the RTN A or RTN B position and turn the Headphone Controller Adjusts the RTN level.

Function	Key Sequence	Action
RTN Split Ear Monitoring		Press and hold the Headphone Controller then Slide the RTN Switch to the RTN A or RTN B position Selected RTN signal in one ear and opposite master signal in the other ear.
RTN A/B Split Ear Monitoring		Press and hold the Headphone Controller, slide the RTN Switch to the RTN A, then RTN B positions A summed RTN A signal is sent to the left headphone output and a summed RTN B signal is sent to the right headphone output.
RTN Loopback		Press and hold the Battery Check button then Slide the RTN Switch to the RTN A or RTN B position Sends the select return signal directly to the Tape and Mono Mic outputs.
Left Output Tone Identification		Hold the Slate Mic/Tone Switch in the Tone position and press the Battery Check Button Cycles the Left Output Tone Oscillator by 20 dB.
Next File		Press the Recorder Controller Announces next file number to be recorded.
Reset Take Counter		Hold PFL 5, press the Stop and Battery Check buttons Resets the take number to 001.
SD Card Format (Erase)		Press Stop, Headphone Controller, and Battery Check buttons Formats SD media. REC LED will flash then illuminate solid yellow, wait until light goes out before performing any other action.

Function	Key Sequence	Action
Save User Setup		Hold PFL 1 and press the Stop button Saves User Settings to SD Media.
Load User Setup		Hold PFL 1 and press the Headphone Controller Recalls User Settings from SD Media.
Load Factory Settings		Hold PFL 4 and press the Headphone Controller and the Battery Check button Restores all Setup Menu parameters to Factory Default.