

## PIX-CADDY CF

### CF Mounting Accessory for PIX Video 260i and PIX-DOCK



#### Description

The PIX-CADDY CF provides a solid, removable connection for a CompactFlash (CF) card (not included) to attach to the PIX 260i for recording poly WAV files. Once secured to the caddy, CF cards are quickly inserted and removed from the recorder.

#### Contents

- 1) PIX-CADDY CF

#### Operation

Connect the PIX-CADDY CF to the PIX 260i by sliding the caddy into the drive opening. Remove the caddy by pushing both of the gray release latches, then pull the assembly away from the PIX 260i.

To insert a CF card:

1. Make sure the CF ejector button is flush with the face of the PIX-CADDY CF. If it is protruding from the PIX-CADDY CF, press it in.
2. With the **top** (manufacturer's label) of the CF card facing **down** (away from the Sound Devices logo on the PIX-CADDY CF), carefully insert the CF card into the CF slot of the PIX-CADDY CF. A properly inserted CF card will be flush with the face of the PIX-CADDY CF.

To remove a CF card:

1. Push the CF ejector button so that it protrudes from the face of the PIX-CADDY CF.
2. Push the CF ejector button a second time to eject the CF card.

CF cards can be inserted and removed from the PIX-CADDY CF while it is inserted in a PIX 260i or while it is disconnected from a PIX 260i. The PIX-CADDY CF can be inserted and removed from the PIX 260i with or without a CF card already inserted. Do not remove a CF card from the PIX-CADDY CF while it is mounted to a PIX 260i and the CF card is in use (recording, busy, or playing).

CF cards need to be formatted by the PIX 260i as exFAT volumes for operation. If the CF card is not formatted by a PIX 260i, format the drive from the PIX 260i Setup Menu (*see PIX 260i user guide*).

---

*See the PIX 260i user guide for details.*

---

---

*See <http://www.sounddevices.com/approved/> for a list of approved media for use with PIX 260i.*

---