



User Guide for En2 MX receiver

Installing and removing batteries

To open the battery vault, slide the grip to the left. This will unlock it and the battery can be placed inside with the positive end of it pointing towards the vault flap.

To close the battery vault, simply push gently down on the flap until you hear a clicking sound. The receiver is now locked and ready to use.

Slide grip to the right to open the battery compartment.



Switch.

Switching the receiver On and Off

To turn the receiver on, simply slide the switch to the left. To turn it off, slide the switch to the right.

Viewing the Main Menu

On the top edge of the receiver, press and hold the navigation switch for 2 seconds. The main menu will be displayed and will read from left to right:



EXIT> FREQUENCY>AF OUTPUT> OPTIONS> SCAN> INFO>LOCK.

Accessing the Frequency option

After accessing the main menu, use the wheel to scroll to the Frequency option. Once the frequency option is highlighted press the middle part of the wheel to view a range of frequencies.

A range of frequencies will then be displayed. The desired frequency can be accessed by using the wheel to scroll to it. Then press the middle part of the wheel to select it. Once a frequency has been selected, the receiver instantly goes back to the main menu.

AF output option



After accessing the main menu, use the wheel to scroll to the AF output option. Once the AF output option is highlighted press the middle part of the wheel to view a range of AF outputs.

A range of the AF outputs will then be displayed. The desired AF output option can be accessed by using the wheel to scroll to it. Then press the middle part of the wheel to select it. Once an AF output option has been selected, the receiver instantly goes back to the main menu.

Options



After accessing the main menu, use the wheel to scroll to the Options. When the word 'Options' is highlighted, press the middle part of the wheel. On doing so the Options will be displayed, consisting of:

EXIT>OUTPUT MODE> FREQ MODE> BRIGHTNESS> SCREEN SAVER> RESTORE.

Output mode




On selection of the Output mode, use the wheel to scroll to either the camera or headphones option. Once an Output mode has been chosen, press the middle part of the wheel to select this. Once you have selected an output mode, the receiver will instantly go back to the options menu.

Frequency mode



On selection of the Frequency mode, use the wheel to scroll to either the Preset user or Tune. Once a Frequency mode has been chosen, press the middle part of the scroll to select either one. Once you have selected a Frequency mode, the receiver will instantly go back to the Main menu.

Brightness

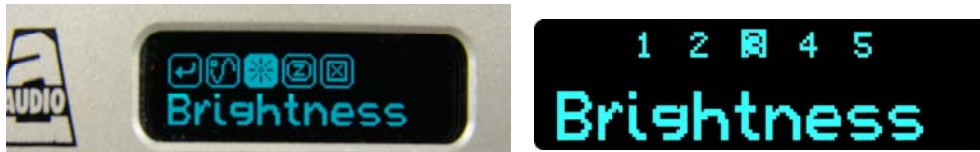

On selection of the Brightness mode, scroll the wheel to scroll to select on of five brightness options. Once a brightness option has been selected, the receiver will instantly go back to the options menu.

Screen Saver



On selection of the Screen Saver mode, move the wheel to scroll between 4 screen brightness options:

X (NONE) > 5 seconds > 20 seconds > 60 seconds.

Once you have selected a Screen Saver, the receiver will go back instantly to the options menu.

Restore



To restore the default settings, scroll to the right. This will take you back to the Main Menu.

Scan



After accessing the main menu, use the wheel to scroll to the Scan option. Once the Scan option is highlighted press the middle part of the wheel to view the options :Cancel > Free > TX.

Don't know how to develop this one.

Information option



After accessing the main menu, use the wheel to scroll to the Info option. Once the Information option is highlighted press the middle part of the wheel to view the options : S/N> Rev > Table. To view the information for any of these, there is no need to press down the middle button. Simply scrolling from left to right will enable you to view the data for any of the three headings. Pressing the middle button will instantly take the receiver back to the Main Menu.

Lock option



After accessing the main menu, use the wheel to scroll to the Lock option. Once the Lock option is highlighted, press the middle part of the wheel to view the options: No>Yes.

To choose to lock the receiver, scroll using the wheel to the Yes option. This will lock the receiver. The receiver will then go back to the main menu, with an unlock symbol to replace the lock symbol.

To unlock the receiver, scroll to the unlock symbol and use the middle part of the wheel to select the Yes option.