




User guide for the En2 TX Transmitter

Installing and removing batteries

To open the battery vault, slide the grip to the right. This will unlock it and the battery can be placed inside with the positive end uppermost.

To close the battery vault, simply push gently down on the flap until you hear a clicking sound. The transmitter is now ready to use.

Slide grip to the right to open the battery compartment.

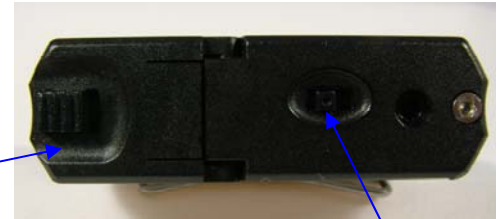

Switch.

Switching the transmitter On and Off

To turn the transmitter on, simply slide the switch to the left. To turn it off, slide the switch to the right.

Viewing the Main Menu

On the top of the transmitter, press and hold the navigation switch for 2 seconds to enter the menu.

The main menu will be displayed and will read from left to right:



EXIT> FREQUENCY>AF GAIN> OPTIONS> INFO>LOCK.

Accessing the Frequency option



After accessing the main menu, use the wheel to scroll to the Frequency option. Once the frequency option is highlighted press the middle part of the wheel to view a range of frequencies.

A range of frequencies will then be displayed. The desired frequency can be accessed by using the wheel to scroll to it. Then press the middle part of the wheel to select it. Once a frequency has been selected, the transmitter instantly goes back to the main menu.

AF Gain option



After accessing the main menu, use the wheel to scroll to the AF gain option. Once the AF gain option is highlighted, press the middle part of the wheel to select one of 10 AF gains.

The desired AF Gain option can be accessed by using the wheel to scroll to it. Then press the middle part of the wheel to select it. Once an AF gain option has been selected, the transmitter instantly goes back to the main menu.

Options



After accessing the main menu, use the wheel to scroll to the Options. When the word 'Options' is highlighted, press the middle part of the wheel. On doing so the Options will be displayed, consisting of:

EXIT>FREQ MODE> BRIGHTNESS> SCREEN SAVER> RESTORE.

Frequency mode



On selection of the Frequency mode, use the wheel to scroll to the Preset, User or Tune. Once a Frequency mode has been chosen, press the middle part of the wheel to select one. Once you have selected a Frequency mode, the transmitter will instantly go back to the Main menu.

Brightness



On selection of the Brightness mode, scroll the wheel to scroll to select on of five brightness options. Once a brightness option has been selected, the transmitter will instantly go back to the options menu.

Screen Saver

On selection of the Screen Saver mode, move the wheel to scroll between 4 screen brightness options:



X (NONE) > 5 seconds > 20 seconds > 60 seconds.

Once you have selected a Screen Saver, the transmitter will go back instantly to the options menu.

Restore

To restore the default settings, scroll to the right. This will take you back to the Main Menu.

Information option



After accessing the main menu, use the wheel to scroll to the Info option. Once the Information option is highlighted press the middle part of the wheel to view the options: S/N > Rev > Table. To view the information for any of these, there is no need to press down the middle button. Simply scrolling from left to right will enable you to view the data for any of the three headings. Pressing the middle button will instantly take the transmitter back to the Main Menu.

Lock option



After accessing the main menu, use the wheel to scroll to the Lock option. Once the Lock option is highlighted, press the middle part of the wheel to view the options: No>Yes.

To choose to lock the transmitter, scroll using the wheel to the Yes option. This will lock the transmitter. The transmitter will then go back to the main menu, with an unlock symbol to replace the lock symbol.

To unlock the transmitter, scroll to the unlock symbol and use the middle part of the wheel to select the Yes option.